

ALARM INSTRUCTIONS:

- 1- The owner can decide if activating or not the independent electronic module.
- 2- Pressing the button within 15 seconds, a short beep and the LED light will indicate that the alarm is being activated. After 10 seconds, 2 beeps will confirm that the alarm sensor is on alert mode.
- 3- If the lock is attacked, 6 beeps and the led light will go on as warning function first.
- 4- If within the next 5 seconds the attack continues, the alarm and led light will go on for 10 seconds cycles, that will repeat if it is being attack within the next 15 seconds.
- 5- After 15 seconds without detecting any attack, the alarm stops and resets to the alert mode.
- 6- To disconnect the alarm, open the lock with the key.

REPLACING THE BATTERY OR MODULE:

- 1- A strange noise or malfunction states that you probably must replace the batteries.
- 2- Remove the allen screws that hold the metal cover at the base of the lock.



- 3- Remove the alarm module and replace the CR2 battery as photos.



KEYLOCKING:

- 1- Clean with multipurpose spray.
- 2- Grease with lithium + PTFE (teflon) spray or synthetic + PTFE spray (as used for chains).

WARRANTY TERMS:

- 1- The lock is warranted for 2 years since the purchasing ticket date.
- 2- The defective product has to be returned with ALL THE KEYS and the purchasing ticket.
- 3- The warranty is limited to the replacement of a recognized manufacturing defect, excluding the disfunctions due to improperly use, a lack of care or an accidental cause.